


Maple 30/3 Pump

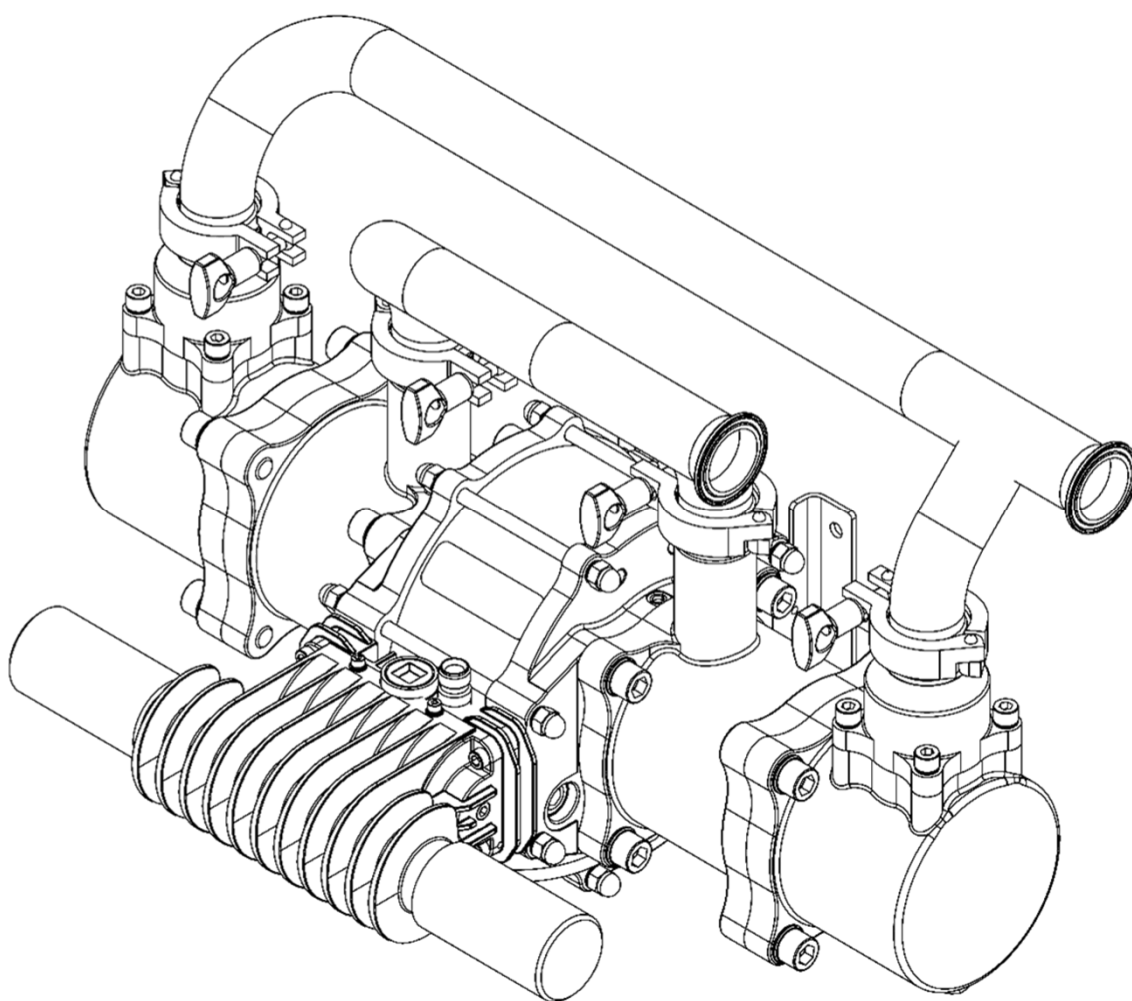

ADDITIONAL RESOURCES

For additional information or copies of your service manual, please visit us online at:

binks.com/en/library

Obey local or municipal regulations for product recycling and disposal.

IMPORTANT! DO NOT DESTROY
It is the Customer's responsibility to have all operators and service personnel read and understand this manual.
Contact your local Binks representative for additional copies of this manual.
READ ALL INSTRUCTIONS BEFORE OPERATING THIS PRODUCT

Product Description / Object of Declaration:	Pumps - Maple, DVP, 104009, 104010/LS, 104016, 104027, 104032, 104040/1/2, 104077, 104020-M2, 104023, 104025, 104028/9, 106933, 104205, 104149-52, 104207-15, 104147, 104265/66/67.
This Product is designed for use with:	Solvent & Waterbased Materials
Suitable for use in hazardous area:	Zone 1/Zone 2
Protection Level:	Ex h IIB T4 Gb X
Notified body details and role:	Element Materials Technology Rotterdam B.V. (2812)
	Lodging of ATEX Technical file
This Declaration of Conformity / Incorporation is issued under the sole responsibility of the manufacturer:	Binks U.K. Limited, Ringwood Road, Bournemouth, BH11 9LH. UK
Representative authorised to compile the technical file	President @. Binks France SAS 5 Place Pierre Semard, 94130 Nogent sur Marne , Paris, France

EU Declaration of Conformity



This Declaration of Conformity / Incorporation is issued under the sole responsibility of the manufacturer:

Machinery Directive 2006/42/EC

ATEX Directive 2014/34/EU

by complying with the following statutory documents and harmonised standards:

EN ISO 12100:2010 Safety of Machinery - General Principles for Design

EN 12621:2006+2010 Machinery for the supply and circulation of coating materials under pressure - Safety requirements

EN ISO 80079-36:2016 Explosive Atmospheres- Part 36:Non Electrical equipment for explosive atmospheres-Basic methods and requirements.

EN ISO 80079-37:2016 Explosive Atmospheres- Part 37: Non Electrical equipment for explosive atmospheres - protection by methods "c", "b" and "k".

EN 1127-1:2019 Explosive atmospheres - Explosion prevention - Basic concepts

Providing all conditions of safe use / installation stated within the product manuals have been complied with and also installed in accordance with any applicable local codes of practice.

Signed for and on behalf of Binks
U.K. Ltd:

Document Part No.
. EN

F. A. Sutter

22/04/25

Executive President: Engineering and
Operations, Shoreview, MN, 55126. USA

Product Description / Object of Declaration:	Pumps - Maple, DVP, 104009, 104010/LS, 104016, 104027, 104032, 104040/1/2, 104077, 104020-M2, 104023, 104025, 104028/9, 106933, 104205, 104149-52, 104207-15, 104147, 104265/66/67.
This Product is designed for use with:	Solvent & Waterbased Materials
Suitable for use in hazardous area:	Zone 1/Zone 2
Protection Level:	Ex h IIB T4 Gb X
Approved body details and role:	Element Materials Technology Warwick Ltd. UK. (0891)
	Lodging of UKEX Technical file
This Declaration of Conformity / Incorporation is issued under the sole responsibility of the manufacturer:	Binks U.K. Limited, Ringwood Road, Bournemouth, BH11 9LH. UK

UKCA Declaration of Conformity



This Declaration of Conformity / Incorporation is issued under the sole responsibility of the manufacturer:

Supply of Machinery (Safety) Regulations 2008
Equipment and Protective Systems Intended for use in Potentially Explosive Atmospheres Regulations 2016
by complying with the following statutory documents and designated standards:
BS EN ISO 12100:2010 Safety of Machinery - General Principles for Design
BS EN 12621:2006+2010 Machinery for the supply and circulation of coating materials under pressure - Safety requirements
BS EN ISO 80079-36:2016 Explosive Atmospheres- Part 36:Non Electrical equipment for explosive atmospheres-Basic methods and requirements.
BS EN ISO 80079-37:2016 Explosive Atmospheres- Part 37: Non Electrical equipment for explosive atmospheres - protection by methods "c", "b" and "k".
BS EN 1127-1:2019 Explosive atmospheres - Explosion prevention - Basic concepts

Providing all conditions of safe use / installation stated within the product manuals have been complied with and also installed in accordance with any applicable local codes of practice.

Signed for and on behalf of Binks
U.K. Ltd:

Document Part No.
. EN

F. A. Sutter

22/04/25

Executive President: Engineering and
Operations, Shoreview, MN, 55126. USA

 WARNING	 CAUTION	NOTE
Hazards or unsafe practices which could result in severe personal injury, death or substantial property damage.	Hazards or unsafe practices which could result in minor personal injury, product or property damage	Important installation, operation or maintenance information.

 WARNING

Read the following warnings before using this equipment.



READ THE MANUAL. Before operating finishing equipment, read and understand all safety, operation and maintenance information provided in the operation manual.



WEAR SAFETY GLASSES. Failure to wear safety glasses with side shields could result in serious eye injury or blindness.



DE-ENERGIZE, DE-PRESSURISE, DISCONNECT AND LOCK OUT ALL POWER SOURCES DURING MAINTENANCE. Failure to de-energize, disconnect and lock out all power supplies before performing equipment maintenance could cause serious injury or death.



NOISE LEVELS. The A-weighted sound level of pumping and spray equipment may exceed 85 dB(A) depending on equipment settings. Actual noise levels are available on request. It is recommended that ear protection is worn at all times while equipment is in use.



INSPECT THE EQUIPMENT DAILY. Inspect the equipment for worn or broken parts on a daily basis. Do not operate the equipment if you are uncertain about its condition.



EQUIPMENT MISUSE HAZARD. Equipment misuse can cause the equipment to rupture, malfunction or start unexpectedly and result in serious injury.



HIGH PRESSURE CONSIDERATION. High pressure can cause serious injury. Relieve all pressure before servicing. Spray from the gun, hose leaks or ruptured components can inject fluid into your body and cause extremely serious injury.




STATIC CHARGE. Fluid may develop a static charge that must be dissipated through proper grounding of the equipment, objects to be sprayed and all other electrically conductive objects in the dispensing area. Improper grounding or sparks can cause a hazardous condition and result in fire, explosion or electric shock and other serious injury.



PROP 65 WARNING. WARNING: This product contains chemicals known to the state of California to cause cancer and birth defects or other reproductive harm.



AUTOMATIC EQUIPMENT. Automatic equipment may start suddenly without warning.

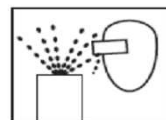


PROJECTILE HAZARD. You may be injured by venting liquids or gases that are released under pressure, or flying debris.



KNOW WHERE AND HOW TO SHUT OFF THE EQUIPMENT IN CASE OF AN EMERGENCY.



PRESSURE RELIEF PROCEDURE. Always follow the pressure relief procedure in the equipment instruction manual.

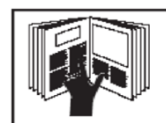

OPERATOR TRAINING. All personnel must be trained before operating finishing equipment.



PACEMAKER WARNING. You are in the presence of magnetic fields which may interfere with the operation of certain pacemakers.



KEEP EQUIPMENT GUARDS IN PLACE. Do not operate the equipment if the safety devices have been removed.



NEVER MODIFY THE EQUIPMENT. Do not modify the equipment unless the manufacturer provides written approval.



PINCH POINT HAZARD. Moving parts can crush and cut. Pinch points are any areas where there are moving parts.

IT IS THE RESPONSIBILITY OF THE EMPLOYER TO PROVIDE THIS INFORMATION TO THE OPERATOR OF THE EQUIPMENT.




Specification

Ratio:	3:1
Maximum air inlet pressure:	7 bar [101.5 psi]
Maximum fluid pressure:	21 bar [304.5 psi]
Nominal flow volume / cycle:	0.75 l [0.20 US gal]
Output @ 60 cycles / min:	45 l/m [12 US gal/m]
Maximum recommended continuous cycle rate:Cycles/min	20
Maximum recommended intermittent cycle rate:Cycles/min	40
Fluid inlet connection:	1 1/2" Sanitary
Fluid outlet connection:	1 1/2" Sanitary
Compressed Air Inlet	3/8" BSPP / NPSM
Air volume / cycle @ 3.1 bar/45psi:	9.5 l/m [0.33 SCFM] @ 3.1 bar [45 psi]
Air volume / cycle @ 6.2 bar/90psi:	18.5 l/m [0.65 SCFM] @ 90 psi [6.2 bar]
Air consumption @ 15 cycles/min and 6 bar [87 psi] air inlet pressure:	283 l/m [10 CFM]
Air consumption @ 30 cycles/min and 6 bar [87 psi] air inlet pressure:	595 l/m [20CFM]
Max. Pump Fluid Inlet Pressure	2 bar [30 psi]
Air Quality ISO 8573.1 Class 3.3.2 # See Note	Dirt: 5 microns Water: -20°C @ 7bar [940ppm] Oil: 0.1mg/m ³
Weight:	35 kg / 77 lbs

Note:


Class 3.4.2 Air Quality (Refrigerant dried - water +3°C@7bar) may be used, however, above 15 cycles/min optional heavy duty mufflers 192821 or piped exhaust system should be used, if used continuously.

Dimensions and Mounting Details

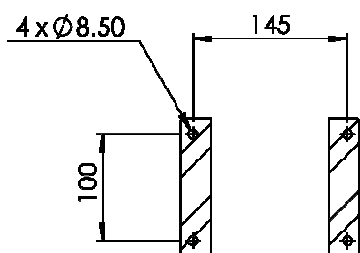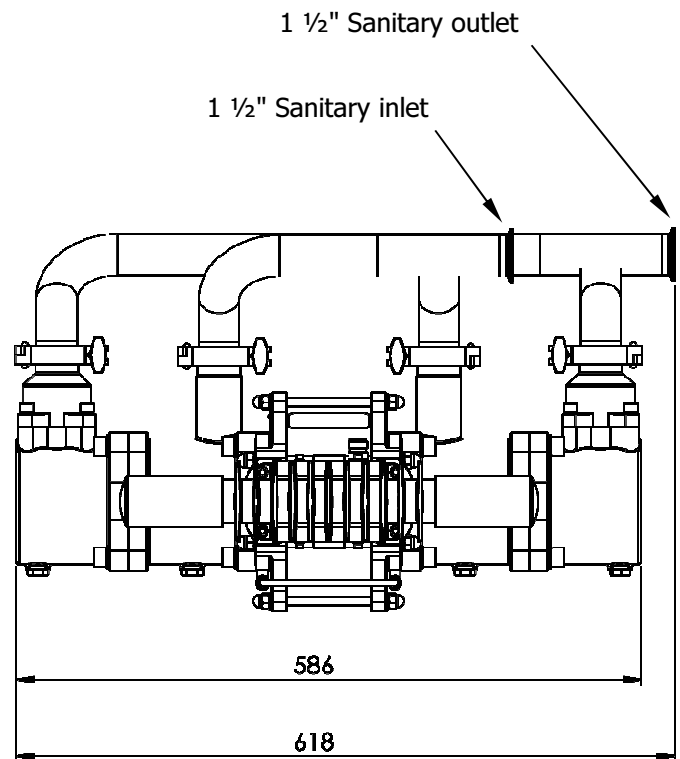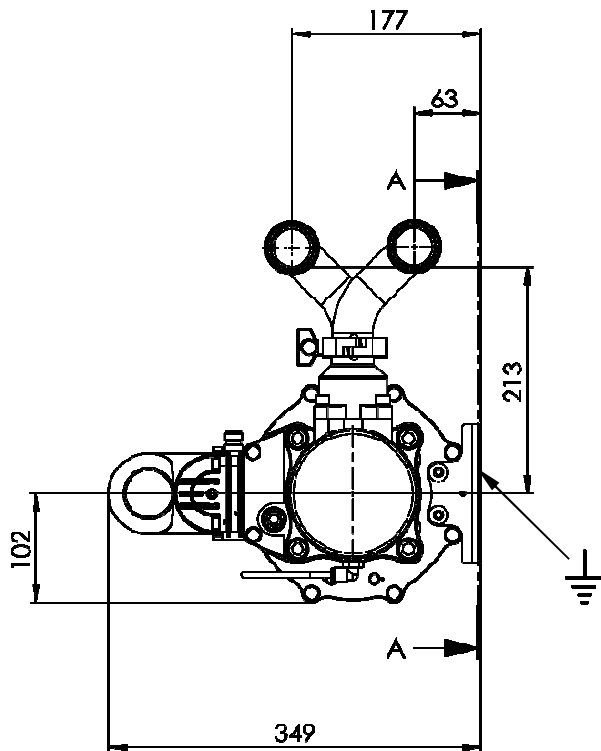

MOUNTING LOCATIONS

SECTION A-A

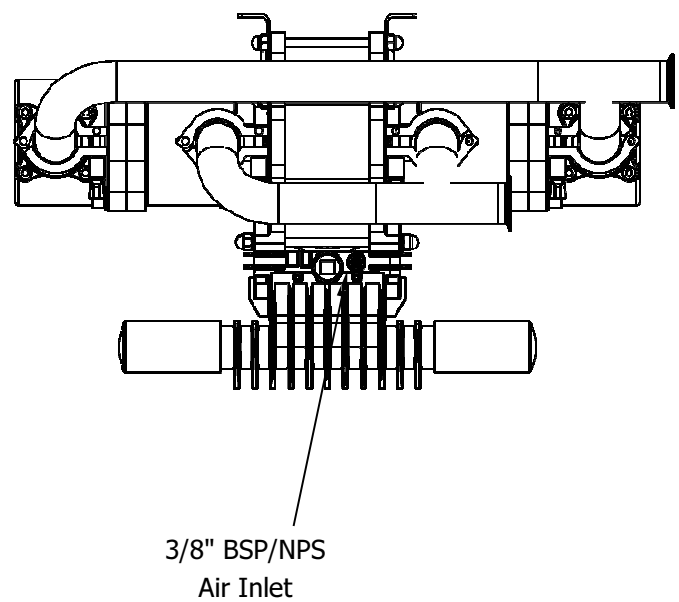

Installation

This product should be flushed with a suitable compatible solvent prior to use.

Mount the pump securely and position the pump at a convenient height (below the lid height of the paint container), to allow for maintenance, visual observation, and periodic inspection.

The wall mount bracket is included with all pumps.

The Pump Mounting bracket must be connected to a suitable earth ground to ensure that there is no possibility of static build up.

Attach suitable flexible hoses to the inlet and outlet connections.

Connect a suitable 3/8" NB air hose and 1/2" Pressure Filter Regulator to the air motor.

(Filter rated at minimum 1000 l/min)

No additional air lubrication is required as piston ring lubricant is applied during assembly or repair.

If an air lubricator is used then, this must be maintained.

Installation

Set the pump speed to a slow cycle rate and prime the pump to remove any air before increasing pressure.

Inspect for any air or fluid leaks.

Set the pump cycle rate to achieve the required paint volume and then adjust the system back pressure regulator and pump air pressure to achieve the desired system fluid pressure.

A Back Pressure Regulator should be mounted in the paint system return line.

The return line 'back pressure' regulator responds to the changes in system fluid flow demand, (due to variable paint usage) by dynamically adjusting the paint flow rate returning to the system paint tank, thus maintaining the set pressure.


If an air blow out system is used, never exceed 2 bar [29 psi] on the inlet of the pump.

Exhaust kits are available for these pumps if the air exhaust is required to be piped away from the pump rather than exhausting locally through the mufflers.

PARTS LIST - Pump Assembly 104010

ITEM	PART NO.	DESCRIPTION	QTY	REMARKS
1	160513	SPRING	2	①②
2	164472	M8 x 25 SOCKET HEAD CAP SCREW	8	
3	164838	No.2 x 4.75 RIVET	2	
4	165108	M8 SPRING WASHER	8	
5	165137	M12 SPRING WASHER	16	
6	165960	M12 x 40 SOCKET HEAD CAP SCREW	16	
7	171788	Ø1 3/8" BALL	2	②
8	192008	1 1/2" SANITARY GASKET	4	①② #
9	192009	1" & 1 1/2" SANITARY CLAMP	4	
10	192505	Ø12.42 x 1.78 O-RING	4	
11	192551	1/4" BSP HEXAGON PLUG	4	
12	192595	OUTLET CHECK	2	
13	192596	OUTLET CYLINDER	2	
14	192597	INLET CYLINDER	2	
15	192626	BALL CAGE	2	
16	192629	INLET SPRING KEEP	2	②
17	192632	SEAT	2	②
18	194237	PISTON SEAL	2	①② #
19	192647	Ø50.52 x 2.62 O-RING	2	②
20	192648	Ø41.0 x 1.78 O-RING	2	②
21	192775	INLET MANIFOLD	1	
22	192776	OUTLET MANIFOLD	1	
23	192777	1" VALVE MUFFLER	2	
23	192821	1" HEAVY DUTY MUFFLERS	2	104010-LS
24	192816	BINKS NAMEPLATE	1	
25	193705	AIR MOTOR ASSEMBLY	1	
26	193775	LABEL	1	
27	194243	Ø100 PISTON ASSEMBLY	2	

Pump Assembly 104010

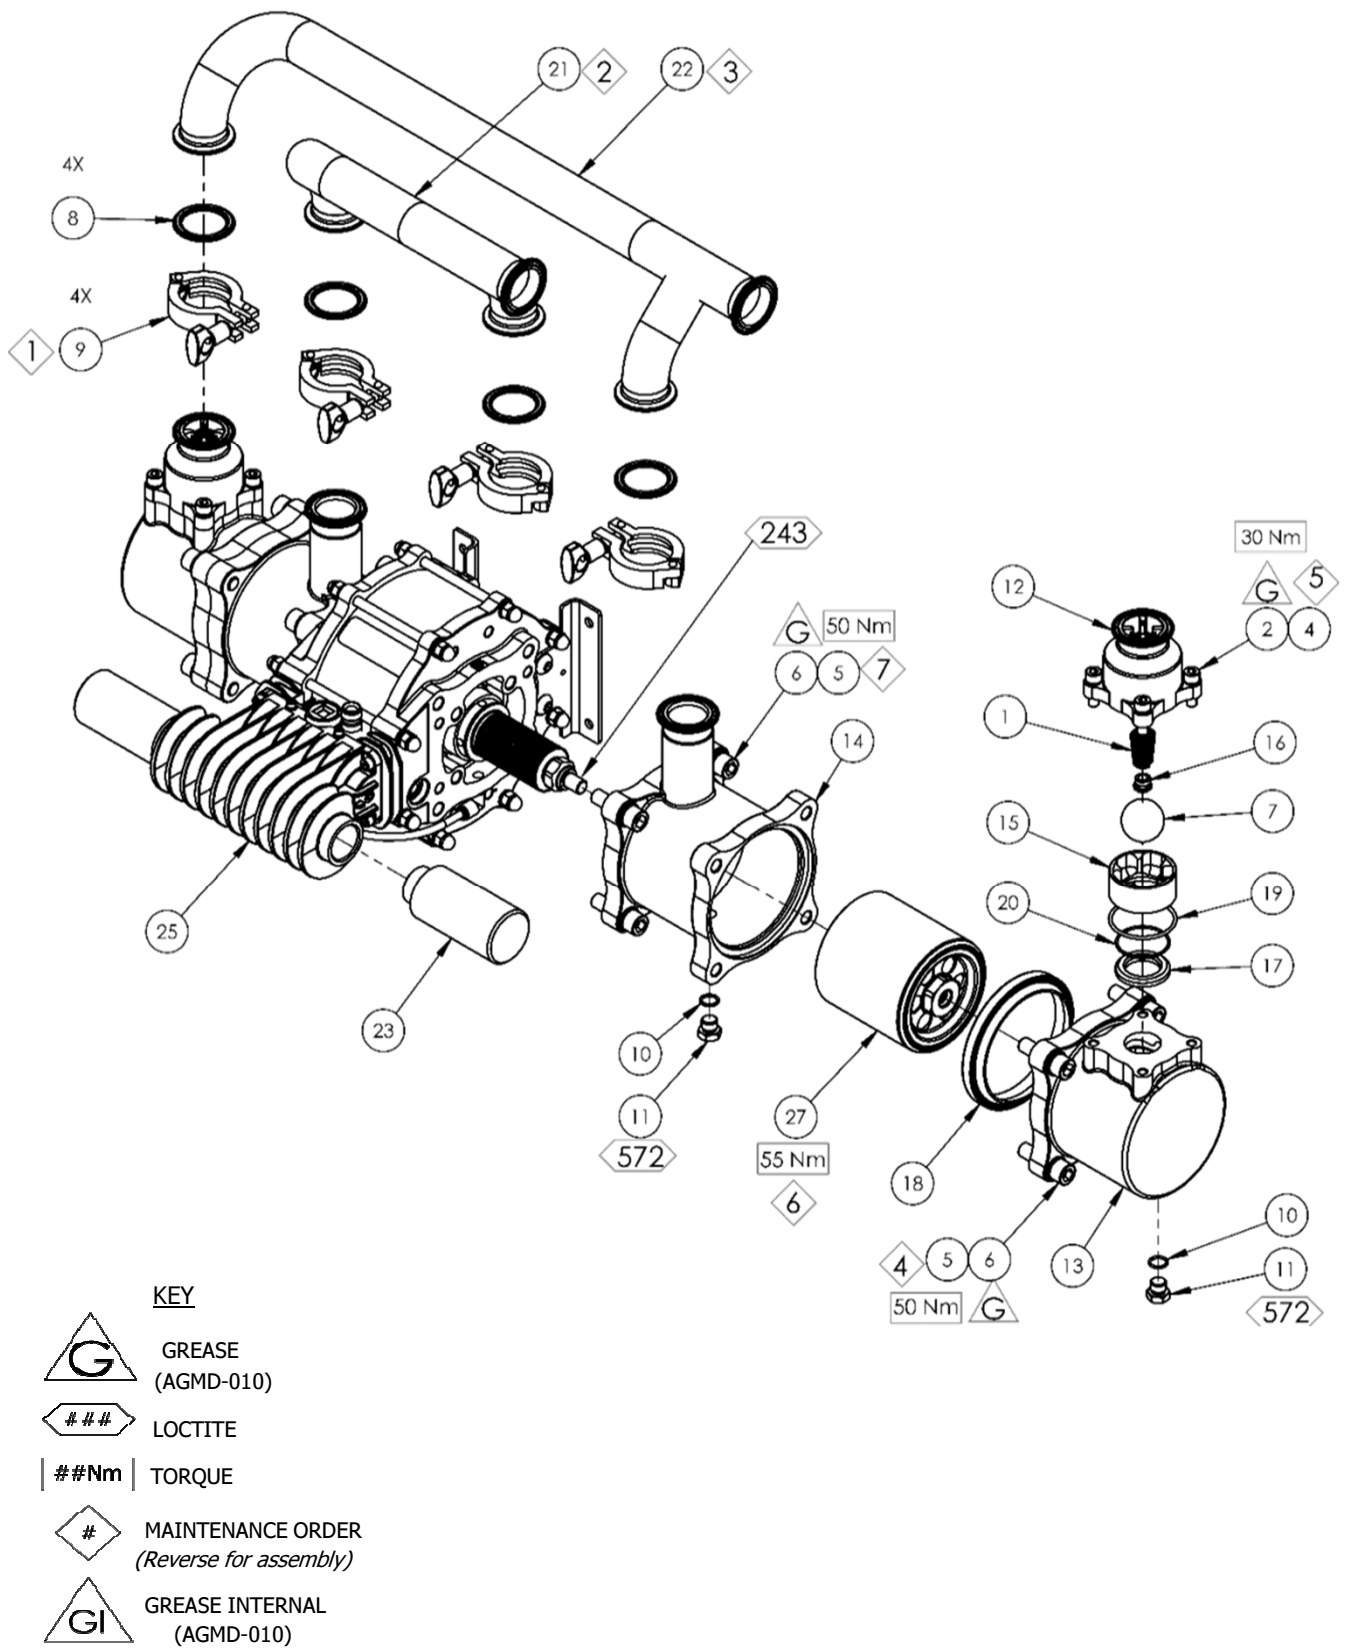

PARTS LIST - Air Motor Assembly


ITEM	PART NO.	DESCRIPTION	QTY	REMARKS
1	0115-010037	POPPET ASSEMBLY	2	④ #
2	0115-010102	AIR VALVE ASSEMBLY	1	④ #
3	161992	Ø117.5 x 2.62 O-RING	2	③
4	161993	Ø20.35 x1.78 O-RING	2	③
5	161994	Ø4.47 x 1.78 O-RING	4	③
6	161995	Ø19.5 x 3.00 O-RING	2	③
7	162703	SHAFT SEAL	2	③
8	162704	SHAFT BEARING	2	③
9	163920	M6 x 30 SOCKET HEAD CAP SCREW	4	
10	165108	M8 SPRING WASHER	16	
11	165528	M4 x 16 SOCKET HEAD CAP SCREW	4	
12	165963	M8 DOME NUT	16	
13	165970	M4 PLAIN WASHER	4	
14	165971	M4 SPRING WASHER	4	
15	177038	M10 x 12 BUTTON HEAD CAP SCREW	4	
16	192374	RETAINING NUT	2	
17	192579	KNIFED BELLOWS	2	② #
18	192757	AIR CYLINDER	1	
19	192761	CYLINDER STUD	6	
20	192762	CYLINDER STUD - LONG	2	
21	192763	BELLOWS SPACER	2	
22	192764	PUMP BRACKET	2	
23	192799	VENT PLUG	2	
24	192812	EXHAUST ADAPTER	1	
25	192814	BELLOWS LEAK DETECTION HOSE	1	③
26	192815	1/8R - 6mm PUSH IN ELBOW	2	
27	194293	AIR MOTOR PISTON ASSY	1	
28	194599	END PLATE MACHINING	2	

Air Motor Assembly

KEY


	GREASE (AGMD-010)
	LOCTITE
	TORQUE
	MAINTENANCE ORDER (Reverse for assembly)
	GREASE INTERNAL (AGMD-010)

ITEM 7 DETAIL

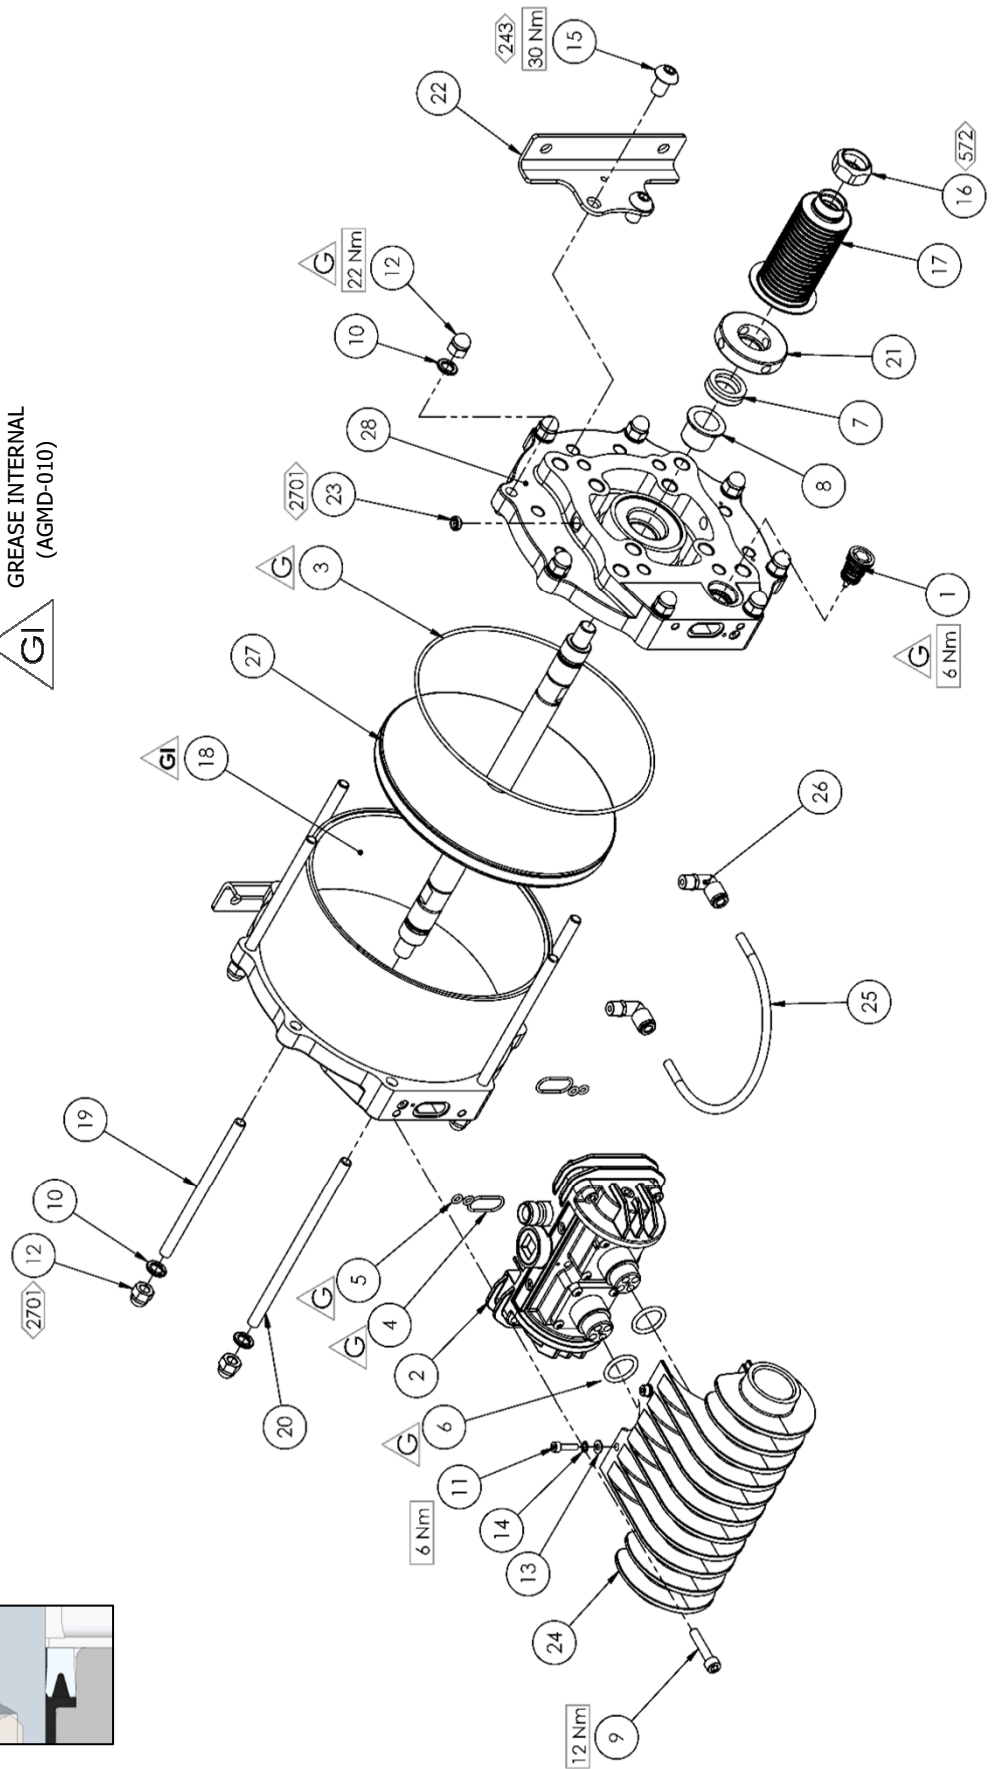

Air Motor Piston Assembly 194293

ITEM	PART NO.	DESCRIPTION	QTY	REMARKS
1	162702	AIR MOTOR PISTON SEAL	1	③
2	165964	M12 x 40 GRUB SCREW	1	
3	192759	PISTON SHAFT	2	
4	192760	PISTON	1	

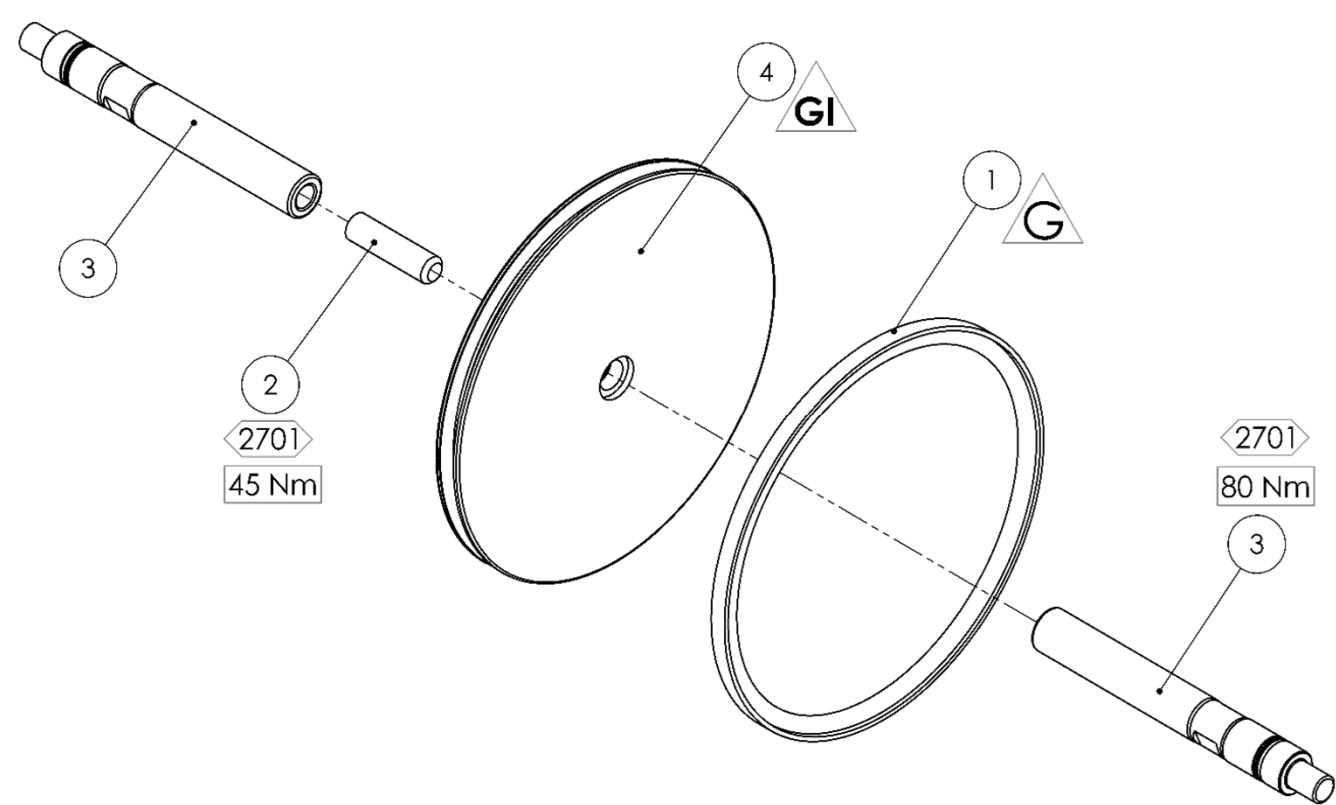

KEY

GREASE
(AGMD-010)

LOCTITE

TORQUE

MAINTENANCE ORDER
(Reverse for assembly)

GREASE INTERNAL
(AGMD-010)

Air Valve Assembly 0115-010102

ITEM	PART NO.	DESCRIPTION	QTY	REMARKS
1	0115-010015	SPOOL AND SLEEVE ASSEMBLY	1	④ #
	162789	SPOOL AND SLEEVE O-RING	6	<i>Not Shown</i>
2	0115-010016	BUMPER	2	④
3	0115-010017	MAGNET	2	④
4	0115-010018	VALVE BLOCK END CAP	2	
5	0115-010020	DIAPHRAGM	2	③
6	0115-010021	36 x 1.5 O-RING	2	③
7	0115-010049	20 x 2.0 O-RING	2	④
8	0115-010073	M4 x 12 BUTTON HEAD CAP SCREW	8	
9	0115-010097	VALVE BLOCK	1	
10	0115-010103	1/4" BSPT PIPE PLUG	1	
11	0115-010107	1/8" BSPT PIPE PLUG	1	
12	180584	3/8" UNIVERSAL FITTING	1	
13	192813	QUICK EXHAUST VALVE CAGE	2	

KEY



GREASE
(AGMD-010)



LOCTITE




TORQUE



MAINTENANCE ORDER
(Reverse for assembly)




GREASE INTERNAL
(AGMD-010)

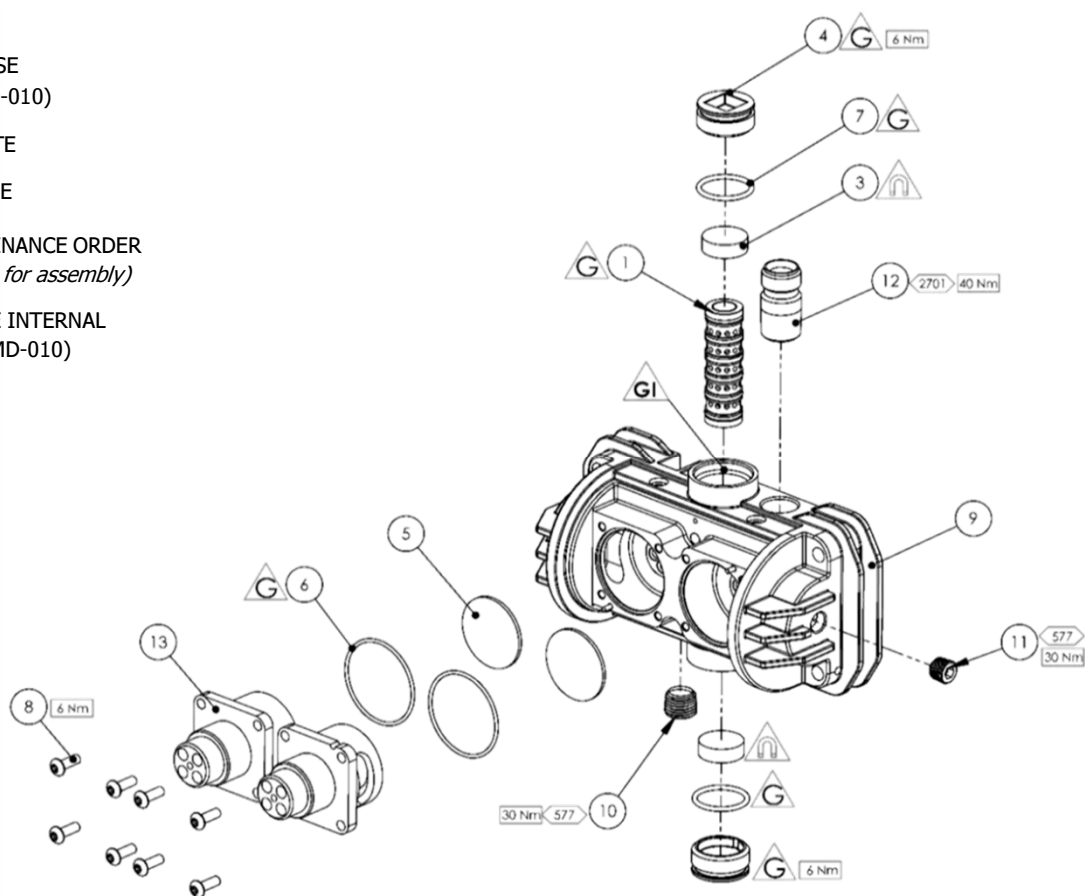

Fluid Piston Assembly 194243

ITEM	PART NO.	DESCRIPTION	QTY	REMARKS
1	160513	PISTON BALL CHECK SPRING	1	① ②
2	162805	Ø63.17 x 2.62 O-RING	1	① ②
3	162807	Ø50.52 x1.78 O-RING	1	① ②
4	162854	Ø82.22 x2.62 O-RING	1	① ②
5	171784	1.375" BALL	1	②
6	192629	INLET SPRING KEEP	1	① ②
7	192631	SEAT	1	②
8	193626	Ø100 FLUID PISTON	1	
9	193627	BALL CAGE	1	

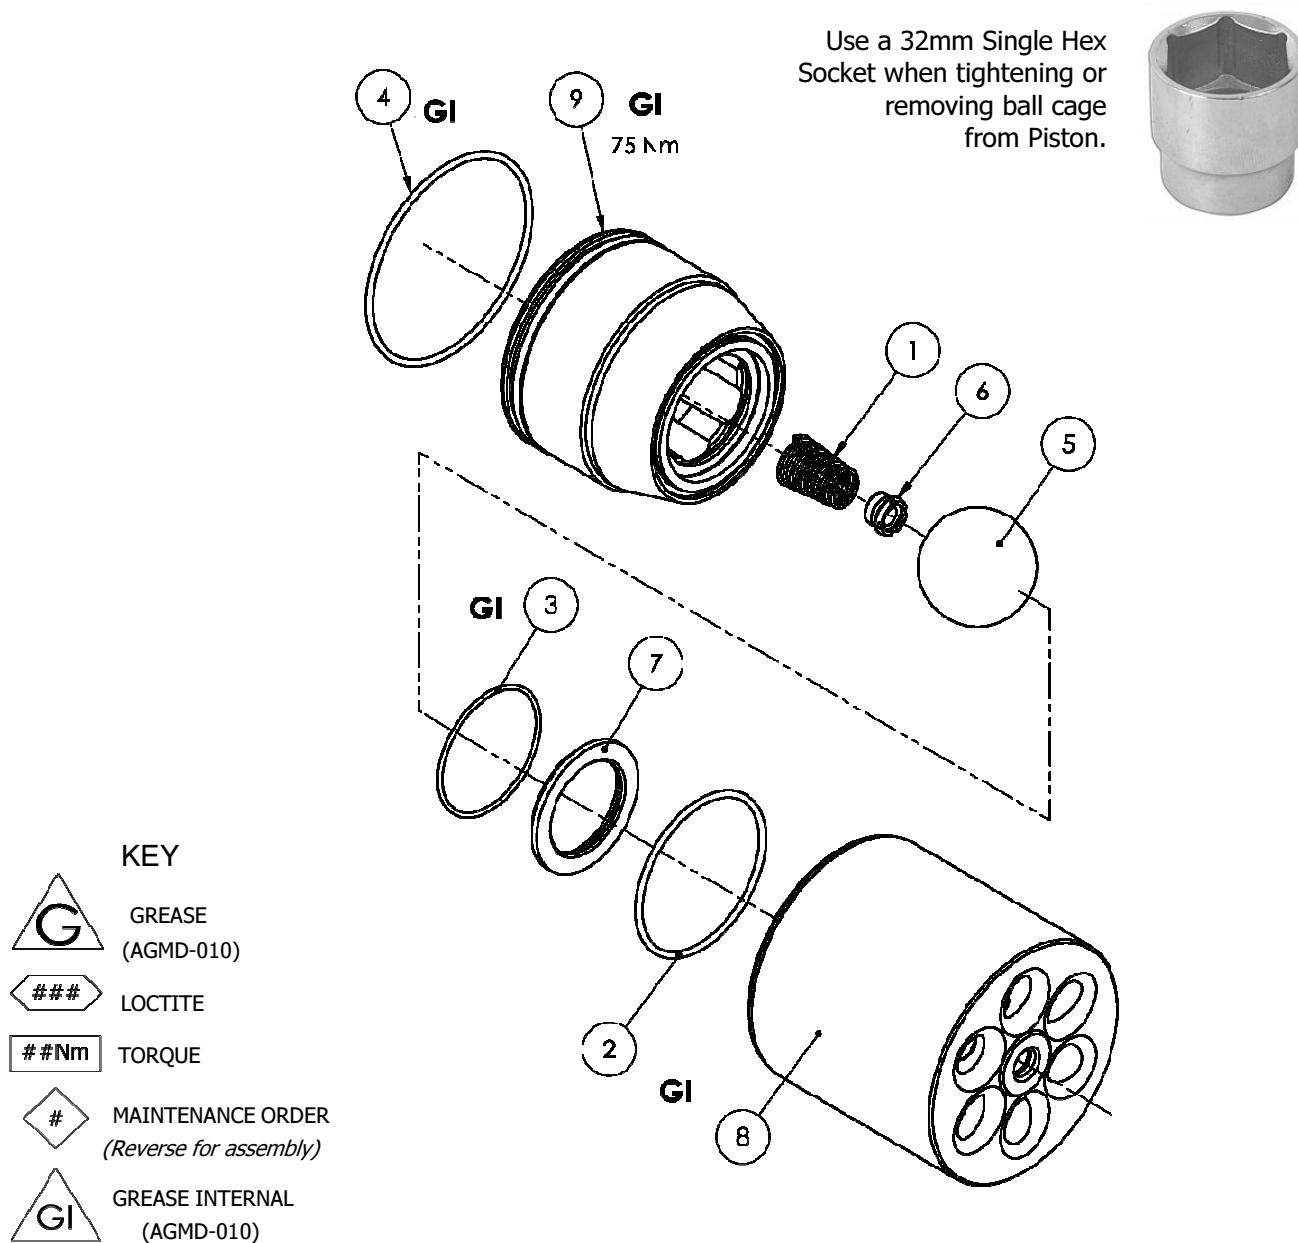

Fault Finding

Symptom	Possible Cause	Remedy
Pump will not 'Prime'	Air getting into the suction hose/manifold	Check seals and hose connections.
	Worn piston seal.	Replace piston seals.
	Ball checks not seating correctly.	Inspect, clean and/or replace balls and seats.
Pump will not run	No air or fluid supply	Check air and fluid supply ball valves and supply hoses.
	Air piston seal worn.	Replace piston seal.
	Pilot valve assemblies inoperable.	Switch/interchange pilot valves to isolate faulty pilot valve and clean/replace.
	Main air valve inoperable.	Check clean/replace Air valve.
	QE diaphragm defective.	Check for constant exhaust air when pump is not running. Check/replace QE diaphragms.
	Ball checks not seating correctly.	Inspect, clean and/or replace balls and seats.

Fault Finding

Symptom	Possible Cause	Remedy
Pump runs but has excessive pulsation.	Air getting into fluid line, air supply restricted.	Check seals and hose connections. Check air supply
	Obstructed fluid ball checks.	Remove, clean, and inspect seat, ball, and ball cage. Replace if suspect or worn.
	Worn air motor piston seals.	Replace air motor piston seal.
	Worn/failed air motor shaft seals.	Disassemble pump as required to replace air motor shaft seals.
	Worn fluid piston seal.	Replace fluid piston seal.
	Air exhaust restricted.	Check QE diaphragms and exhaust outlets.
Paint leaking into detection hose, air bleeding from vent plug	Bellows seal failure	Replace bellows seal
	Air motor shaft seal leaking	Check air motor shaft seal replace as necessary

Spares Kits for Maple 30 Pump

KIT No.	PART NO.	DESCRIPTION	QTY	REMARKS
❶	250768**	Fluid section seal kit	1	Check main parts list for details of individual kit contents
❷	250738**	Fluid overhaul kit	1	
❸	250618	Air Motor Seal Kit	1	
❹	250628*	Control Valve Kit	1	
#	0115-010037*	Poppet Assembly	1	2 off per pump
#	0115-010015	Main Spool & Sleeve Valve Assembly	1	1 off per pump
#	194237	Piston seal	1	2 off per pump
#	192579	Knifed Bellows	1	2 off per pump
# - Recommended spare parts for continually running pumps				

* Pumps before serial number 53971 will require; Pilot spool assembly 192765, Control valve kit 250620.

**** Note:**


Fluid section seal & fluid section overhaul kits contain all the necessary components to service Mark one and two pistons.

Discard components not required.


Maintenance schedule	
Inspection	Operation
Daily	Check for any general fluid or air leakage.
Weekly	Inspect Pump for Correct operation Check for any excessive mechanical noise Check for excessive fluid pressure pulsation
6 Month Test	Perform a pump stall test to ensure correct operation.
	If pump does not stall, check fluid piston seals and ball checks, replace as required.
	If air is escaping through exhaust, check air motor piston seal and quick exhaust diaphragm, replace as required.
12 to 36 Months (Typically 10 million pump cycles dependant on air quality and abrasiveness of the paint used)	Replace air piston seal, Replace shaft seals & bearings.
	Inspect and replace if required: Pilot Air Valves & Main Air Valve Parts.
	Replace fluid piston seal, Replace Balls, Seats and Bellows.

Bellows Replacement


ITEM	PART NO.	DESCRIPTION	QTY	REMARKS
1	502769	Bellows positioning tool	1	
2	502382	Bellows assembly spigot	1	

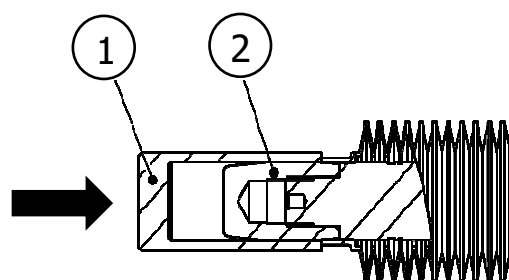

Screw Item No. 2 (assembly spigot) onto the piston shaft

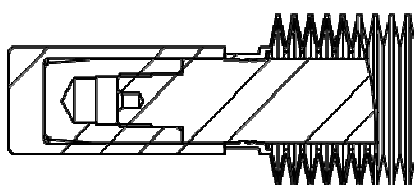

Using Item No. 1, push bellows over spigot until located in groove.

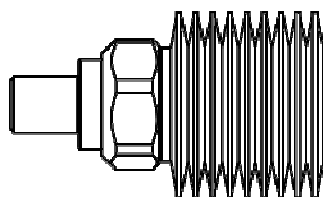

Smear loctite 572 over nose of bellows, thread nut onto bellows ensuring the thread starts squarely. Grip bellows lightly by hand and tighten the nut with a 1" A/F spanner until the nut contacts the bellows shoulder.

Accessories

ITEM	PART NO.	QTY
192008	1" & 1 1/2" Sanitary Gasket	
192009	1" & 1 1/2" Sanitary Clamp	
502608	Seal Insertion Tool	For Shaft seal (7)
502769	Bellows Positioning Tool	
502382	Bellows assembly spigot	
AGMD-010	Kluber Isoflex Topas NB 52 Grease	50ml Tube
192779	Exhaust Tube Adapter (1" NB hose)	For piped exhaust
192820	Exhaust Tube Adapter (1.5" NB hose)	For piped exhaust
192803	1" Manifold Plug	For piped exhaust
192821	1" BSP Heavy Duty Mufflers	Recommended for high pump pressures and cycle rates

WARRANTY POLICY

This product is covered by Binks materials and workmanship limited warranty.

The use of any parts or accessories, from a source other than Binks, will void all warranties. Failure to reasonably follow any maintenance guidance provided, may invalidate any warranty.

For specific warranty information please contact Binks.

For technical assistance or to locate an authorised distributor, contact one of our international sales and customer support locations below.

REGION	BINKS CONTACT
Americas	Tel: 1-888-992-4657
Europe, Africa, Middle East	Tel: +44 (0)1202 571 111
India	marketingroa@binks.com
China	Tel: +8621-3373 0108
Korea	Tel: +82313663303
Japan	Tel: +81 45 785 6421
Australia	Tel: +61 (0) 2 8525 7555

WARRANTY PAGE





Binks is a global leader in innovative finishing technologies. Binks reserves the right to modify equipment specifications without prior notice.

Binks®, DeVilbiss®, and Ransburg® are registered trademarks of Binks US, LLC.